

MK2Clone

7. Heatbed assembly

Written By: q3ok






Step 1 — Prepare screws





- Take 6 sets of pillar, screw and washer from the set with MK42 clone heatbed

Step 2 — Screw the screws to heatbed

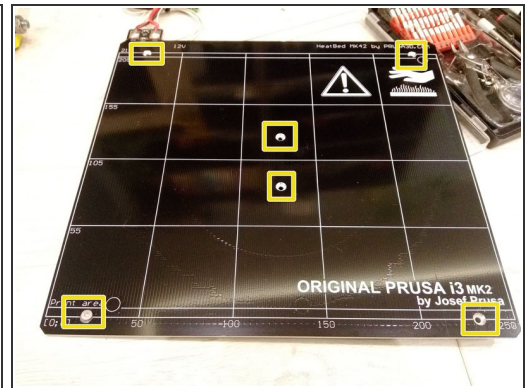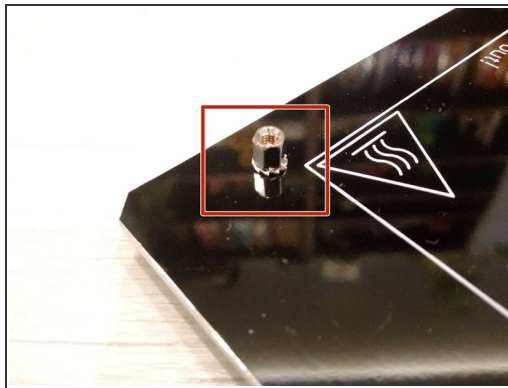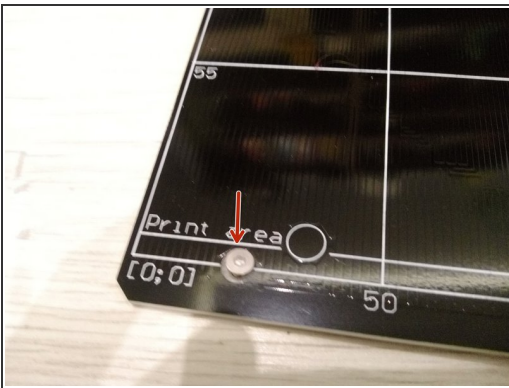



- Insert the screw from the top, and tighten it against the washer and pillar as shown on images
- Repeat the step for all the holes marked on photo

Step 3 — Heatbed cable cover

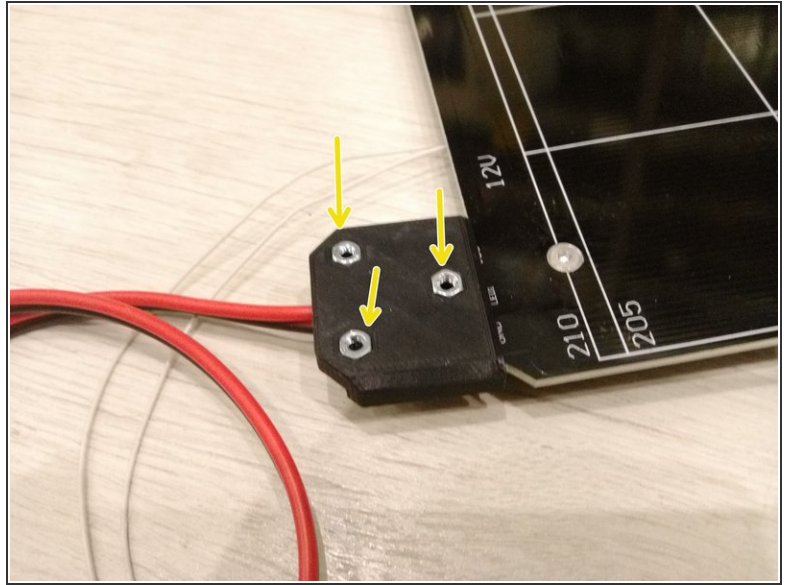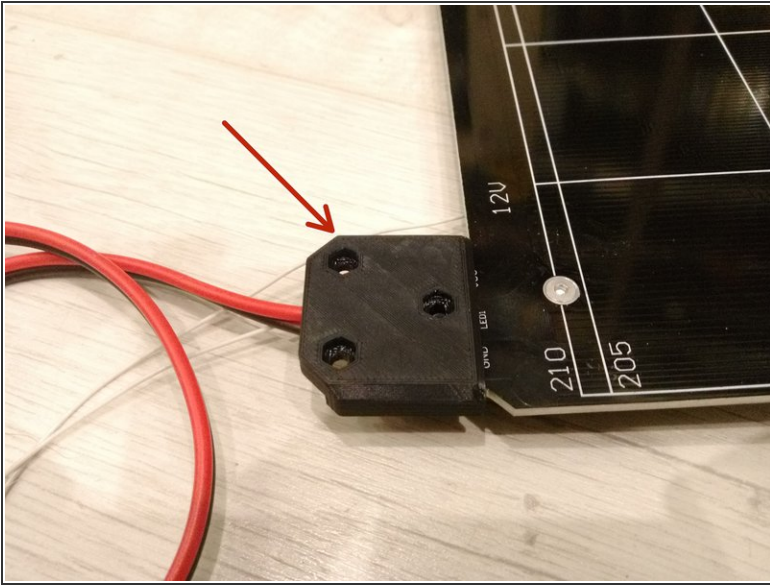

- Take the bigger part of heatbed-cable-cover and put on heatbed as shown on image
- Insert 3x M3 nut into the plastic part

Step 4 — Heatbed cables

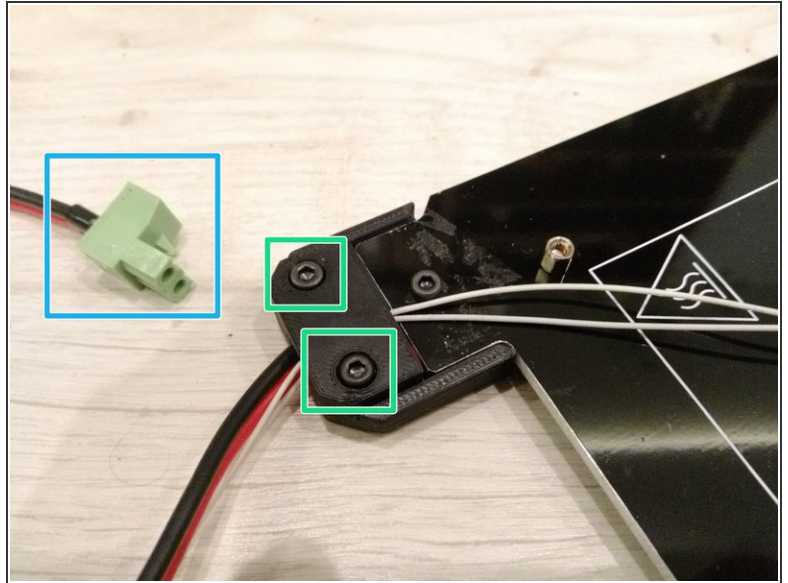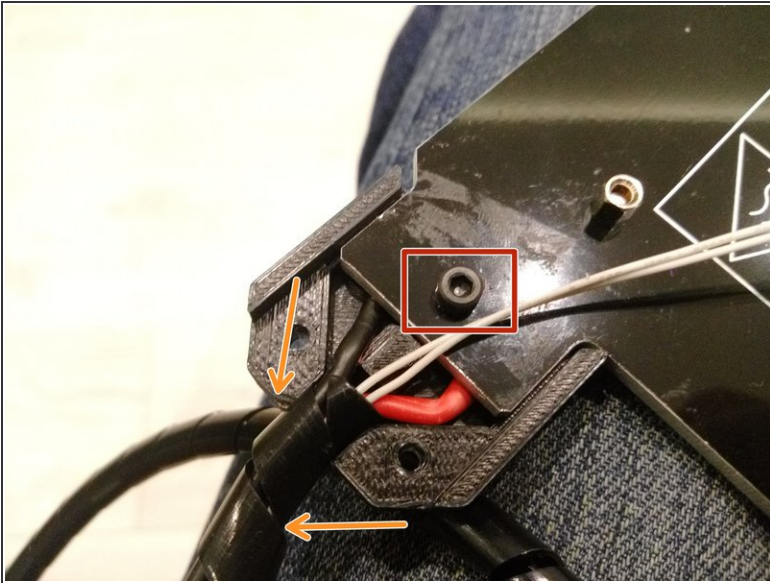

- Use M3x8 screw
- Take the spiral wrap and guide it as shown on image
- Use 2x M3x10 screws with the second side of heatbed-cable-cover plastic
- Remove the connector from end of the cables
- ① Guide the cables like shown on the pictures

Step 5



- Go to [8. TMC2130 preparation](#)